

AC-N95

Disposable N95 cup shape respirator

A single-use, non-valved disposable respirator featuring a pre-formed nosebridge offering protection against particulate hazards.

Features

- ▲ Cup shaped design without a valve
- ▲ Inner seal around the nose area for an effective fit
- ▲ Pre-formed nosebridge for enhanced comfort
- ▲ Retains its shape even in extreme conditions
- ▲ Dual elastic straps



Suitable industries & applications

Industries

- ▲ Construction
- ▲ Manufacturing

- ▲ Oil and Gas

Applications

- ▲ Metal Fabrication Work
- ▲ Disease and Infection Control

- ▲ Woodwork and Fabrication

Europe

sales@globus.com
+44 (0)161 877 4747
+44 (0)161 877 4746

Middle East & Africa

sales.gcc@globusgroup.com
+971 4 882 9962
+971 4 882 9963

Americas

salesusa@globusgroup.com
+1 83 337 54747

AC-N95

Disposable N95 cup shape respirator

Ordering information

One-Size	MMAS/ALP/ACN95	Items per Case 20 x Pieces
-----------------	----------------	-------------------------------


Additional information

Certification legend



or click [here](#)

Declaration of conformity

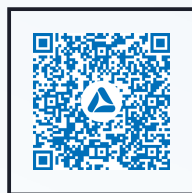

or click [here](#)

View product online



or click [here](#)

Europe

sales@globus.com
+44 (0)161 877 4747
+44 (0)161 877 4746

Middle East & Africa

sales.gcc@globusgroup.com
+971 4 882 9962
+971 4 882 9963

Americas

salesusa@globusgroup.com
+1 83 337 54747

Globus Group, T2 Trafford Point, Twining Road, Trafford Park, Manchester, M17 1SH, UNITED KINGDOM
Globus EMEA FZE, Jafza One, Tower A, Office 2201, Jebel Ali, PO Box 61195, Dubai, UNITED ARAB EMIRATES
Globus Americas LLC, 45 Rockefeller Plaza, Suite 2000, New York City, New York, 10111, USA

The descriptions, characteristics, applications and photos are given for information purposes and do not constitute a contractual commitment.
The manufacturer reserves the right to make any modifications it deems necessary. Published date: 09/12/2025



AC-N95 Particulate Respirator



IMPORTANT: Keep these User Instructions for reference

WARNING :

1. This product does not eliminate the risk of contracting any disease or infection.
2. Failure to follow all instructions and limitations on the use of this product could reduce the effectiveness of respirator and result in sickness or death.
3. Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In the United States, employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.
4. This product does not supply oxygen. Use only in adequately ventilated areas containing sufficient oxygen to support life. Do not use this respirator when oxygen concentration is less than 19.5%.
5. Do not use when concentrations of contaminants are immediately dangerous to health or life.
6. Leave work area immediately and return to fresh air if (a) breathing becomes difficult, or (b) dizziness or other distress occurs.
7. Facial hairs or beards and certain facial characteristics may reduce the effectiveness of this respirator.
8. Never alter or modify this respirator in any way.
9. Only for single use. No maintenance necessary. Discard the used respirator after single use.
10. Keep respirators in the display box away from direct sunlight until use.

FITTING INSTRUCTIONS :

1. Hold the respirator in position over nose and mouth, with retaining straps around back of head. Pull lower portion of strap over head and fit around neck.
2. Stretch and pull the upper strap over your head on the back of your head above your ears.
3. Manoeuvre the respirator in order to obtain a good facial seal.
4. Perform a User Seal Check prior to each wearing : Cup both hands over the respirator and exhale sharply. If air leaks around the edges, reposition the respirator for a good facial seal.
5. Change the respirator immediately if breathing becomes difficult or the respirator becomes damaged or distorted, or a proper face fit can not be maintained. Careful observance of these instructions is an important step in safe respirator use.

THIS RESPIRATOR IS APPROVED ONLY IN THE FOLLOWING CONFIGURATION :

TC	Protection ¹	Respirator	Cautions and Limitations ²
84A-7631	N95	AC-N95	ABCJMNOPS

1. Protection N95-Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply

2. Cautions and Limitations

- A - Not for use in atmospheres containing less than 19.5% oxygen.
- B - Not for use in atmospheres immediately dangerous to life or health.
- C - Do not exceed maximum use concentrations established by regulatory standards.
- J - Failure to properly use and maintain this product could result in injury or death.
- M - All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations.

- N - Never substitute, modify, add, or omit parts. Use only exact replacements parts in the configuration as specified by the manufacturer.
- O - Refer to users instructions, and/or maintenance manuals for information on use and maintenance of these respirators
- P - NIOSH does not evaluate respirators for use as surgical masks.
- S - Special or critical User's Instructions and/or specific use limitations apply. Refer to User's Instructions before donning.

S- Special Instructions : The model AC-N95 filtering facepiece respirator has been manufactured by San Huei United Co., Ltd. for Alpha Solway Ltd. under NIOSH TC-84A-7631.

